


# Post Clamp Extension (WB2-EXT)

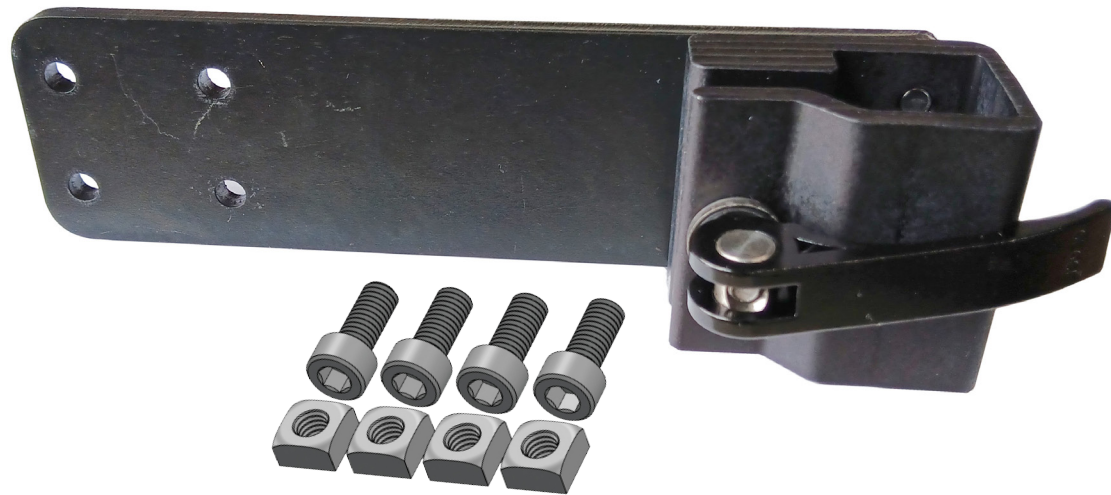

The WB2-EXT comes with hardware to attach to the Permobil seat rail. To attach to the Quantum track you will need a T-NUT



WB2-EXT attached to the Permobil seat rail track



WB2-EXT attached to the Quantum Edge 3 seat rail track...requires a T-Nut